



SYSTEM LT/ATS-234

Thermally broken system for ceramic panels

Installation procedure

Installation of clips on a vertical girt and fastening with rivets A2/A2 $\varnothing 3$

Installation of the bottom row of ceramic panels

Installation of clamps on a vertical girt and fastening with rivets A2/A2 $\varnothing 3$

Installation of subsequent rows of ceramic panels.

FEATURED ATTACHMENT BLOCKS



ATS BLOCK

Backup Wall

- CMU
- Concrete
- Brick



ATS HIGH BLOCK

Backup Wall

- Concrete slab




LT BLOCK

Backup Wall

- Steel/Wood studs
- CMU
- Concrete
- Birck

FEATURED ASSEMBLIES

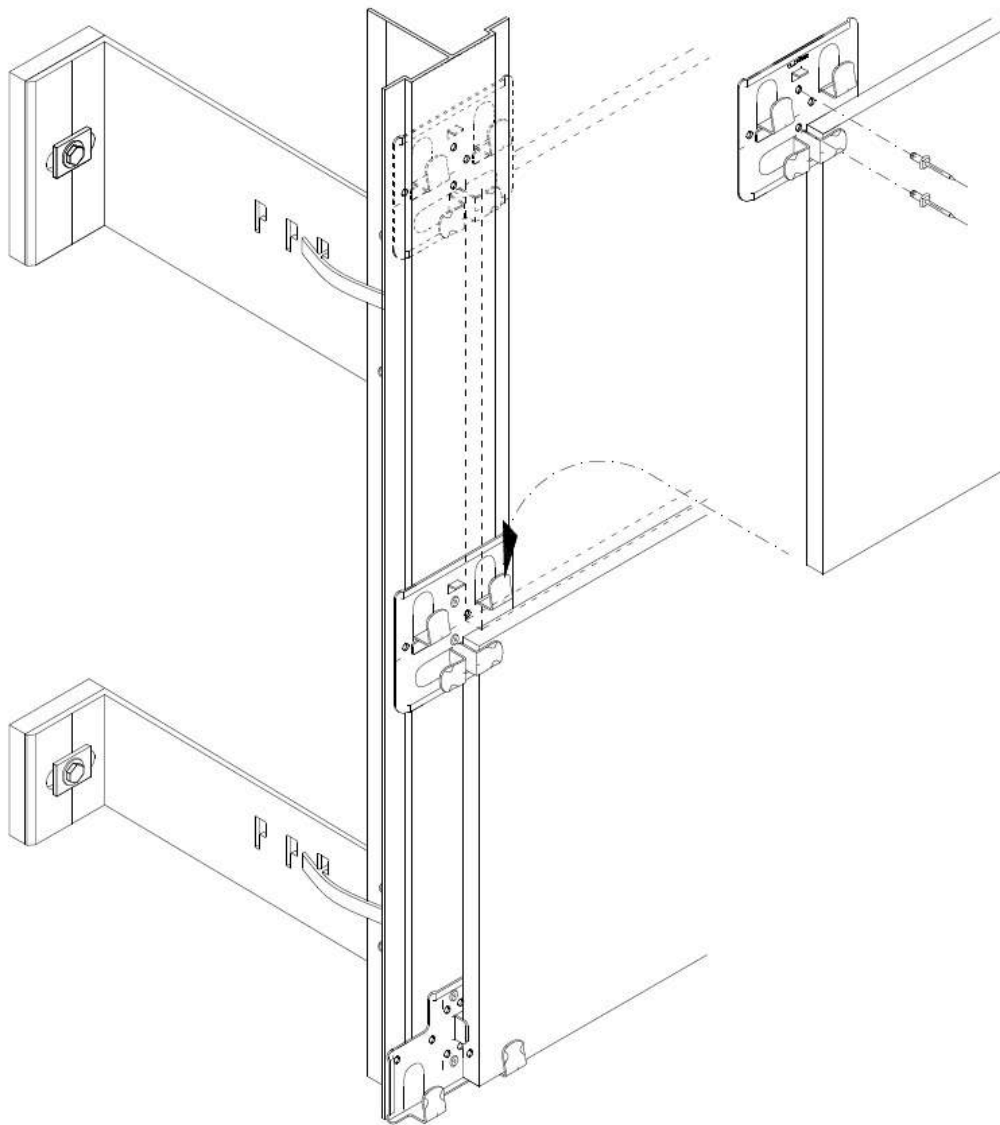

DETAILS

