

SYSTEM LT/ATS-1021

Thermally broken system for acm/mcm panels

Installation procedure

Installation of slide-block in the design position, fixing with standoff bolt.

Installation of a pre-assembled aluminum composite panel.

Aligning the panel.

Permanently secure in design position with rivets A/A2 $\varnothing 5$. When installing a rivet into the oval hole of the panel, a riveter attachment must be used, which provides a movable pairing of elements.

FEATURED ATTACHMENT BLOCKS



ATS BLOCK

Backup Wall

- CMU
- Concrete
- Brick



ATS HIGH BLOCK

Backup Wall

- Concrete slab




LT BLOCK

Backup Wall

- Steel/Wood studs
- CMU
- Concrete
- Brick

FEATURED ASSEMBLIES

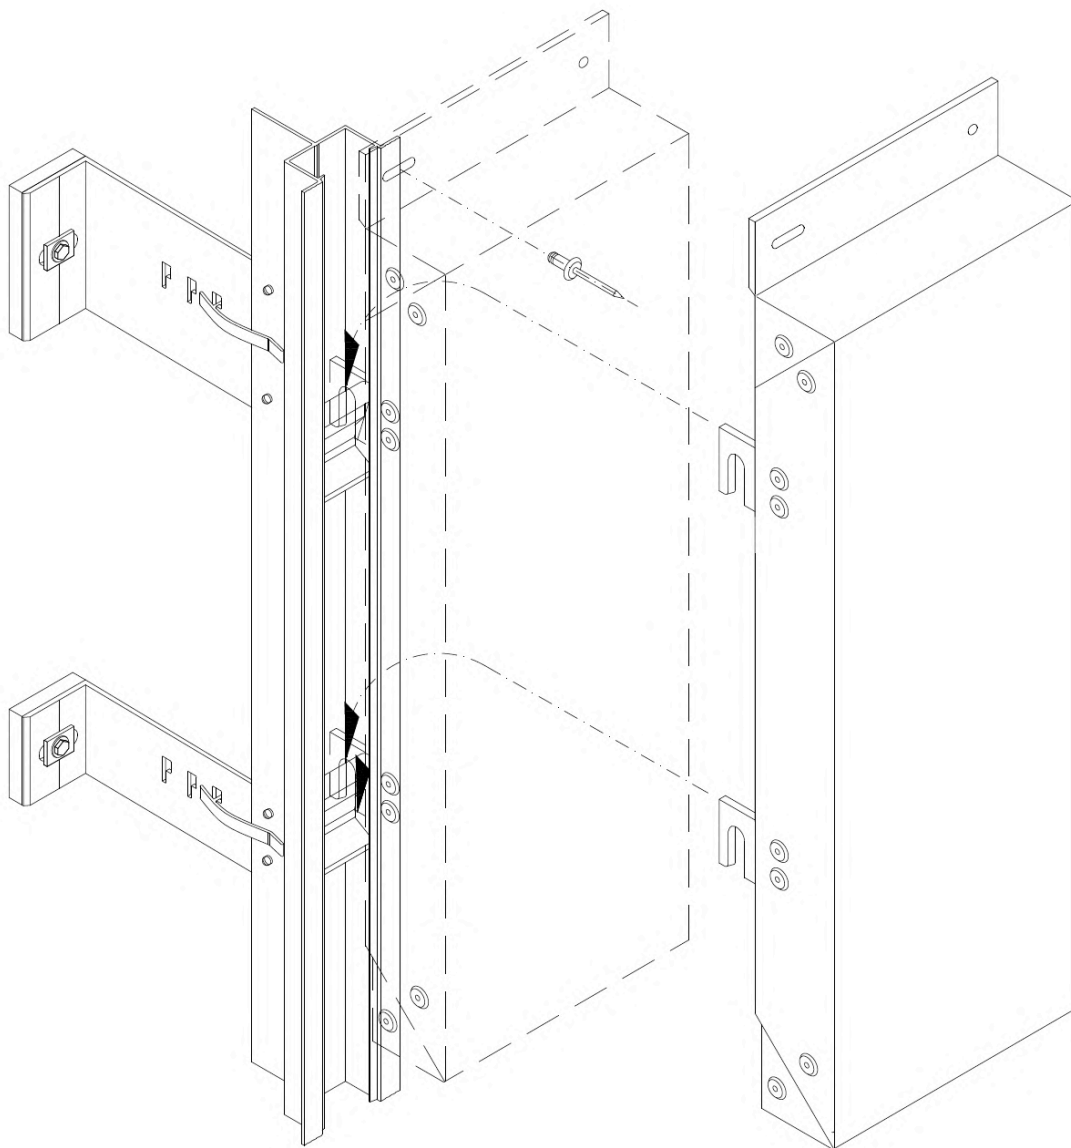

DETAILS

